

CIABATTA INSTRUCTIONS

1. Safe Position

In this position with the button end of the knife pointed down towards the ground -
The knife can not be opened.
When you are ready to open the knife, remove the additional safety and rotate the knife to position #2.




2. OPENING POSITION

Now the knife sits in your hand with the button end up. Simply push the flat section of the blade in towards the handle and "slip" your finger out of the way.
The blade will snap open with the famous Pro-tech coil spring action.



3. UNLOCK & CLOSE

When you are ready to close the knife - be sure it is in the button up position as shown.
Press the button to unlock the blade, fold the blade closed completely into the handle.
Keep pressure on the blade and hold it in the closed position and rotate.

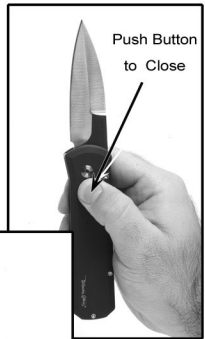

Fold Blade Closed



4. ROTATE BACK TO SAFE POSITION

The pin will fall back into place, locking the blade into position.
Be sure to put the extra safety in the ON position.